
How to turn on your Underfloor Heating

YOU CAN HEAT YOUR APARTMENT VIA THE AIR CONDITIONING SYSTEM (ON YOUR APP). WHEN YOU INCREASE THE TEMPERATURE, YOUR AC ENGINES WILL BLOW OUT WARM AIR. HOWEVER, YOU WILL ENJOY A MUCH MORE PLEASANT ATMOSPHERE IF YOU USE YOUR UNDERFLOOR HEATING SYSTEM, WHICH WILL KEEP YOUR HOME WARM AND COSY DURING THE FRESHER WINTER MONTHS AHEAD.

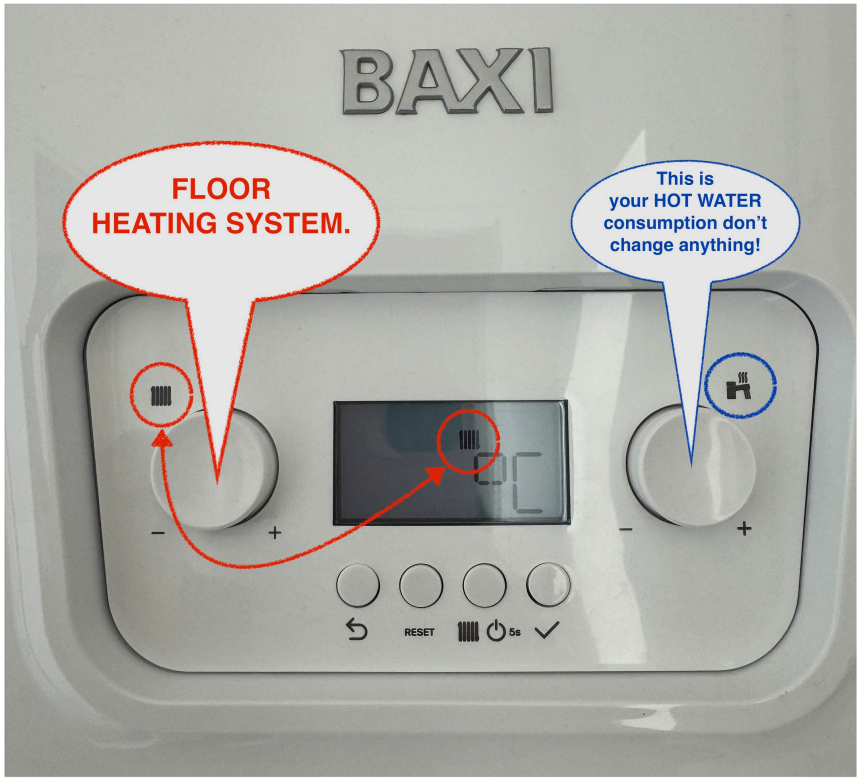


1

On your BAXI boiler, simply scroll the Floor Heating button up to

45°C - 50°C

You will then hear a little noise that indicates the floor heating started to operate

(45°C~50°C is the recommended temperature for the system to operate efficiently)

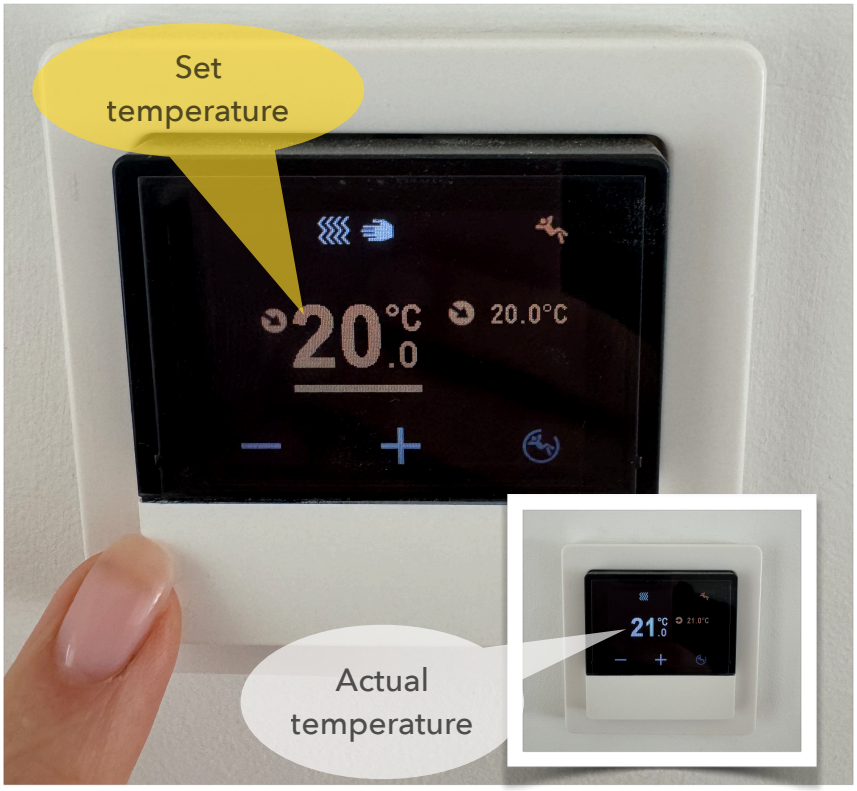

2

On your individual thermostats in the different rooms, gently press the lower left part.

Yellow numbers will appear :
=> Press the (+) and (-) to set the desired room temperature (e.g. 20°C)
=> then release the button

The screen will automatically return to white numbers, this corresponds to your actual room temperature.

Note : On the day you wish to totally switch off the underfloor heating simply scroll the « underfloor heating » button on your BAXI boiler to 0°C.
The underfloor heating system will then switch off automatically.